

Release Notes

xComfort Bridge 3.0

Contents

xComfort Bridge 3.0.1	2
Features and Enhancements	2
New Features	2
Enhancements	2
Remarks.....	2
Remote Access	2
RC Touch firmware update.....	2
xComfort Bridge 2.1.1	2
Features and Enhancements	2
New Features	2
Enhancements	3
xComfort Bridge 1.5.3.....	3
Features and Enhancements	3
New Features	3
Enhancements	3
xComfort Bridge 1.0.....	3
Features and Enhancements	3
New Features	3

xComfort Bridge 3.0.1

Features and Enhancements

New Features

- One Home Page with:
 - Overview of rooms including status and main controls
 - 4 direct accessible Scenes
 - Remote connection indication
- Device usage filtering for Actuators and Sensors overviews
- Function control selection in Rooms: Loads, Lighting, Heating
- Easy setup room-based heating control
- Easy control by Operation Mode: Comfort, Economy, Frost-protection
- Supported sensors: Room Controller Touch*, Temperature Input
- Supported actuators: Heating Actuators, Radiator Thermostat, Multi-heating Actuator
- Supported Heating type:
 - Electrical: Foil, Cable, Infrared Panel, Radiator
 - Water based: Floor heating, Radiator
- Floor temperature protection
- Heating fallback scenario in case the xComfort Bridge is off-line
- Easy time control by Heating-Program
- Easy Heating control by Scenes (set Operation Mode)
- Free Remote Access

Enhancements

- Improved User Interface layout and Font

Remarks

Remote Access

The Remote Connection is per default switched Off the first time this version is installed. Enable the Remote Access via Configure -> Remote Connection. When enabled, the app automatically switches smoothly between local and remote connection.

RC Touch firmware update

The xComfort Bridge could indicate that the RC Touch needs a firmware update. The new version of the RC Touch supports new special features like Direct control (fallback scenario). Download and install the RCT Update Tool. This tool includes the latest Universal firmware version. You can also use the latest MRF software to do the update. Follow the update instructions in the FAQ: How to update the RC Touch firmware.

xComfort Bridge 2.1.1

Features and Enhancements

New Features

- Support of additional xComfort Actuators (with ESM logo!)
- Support of Sensors: Pushbuttons, 2-channel Remote Control, Universal Motion Sensor, Window/Door sensor, Binary input
- Easy commissioning and configuration of Sensors to control actuators, rooms and scenes

- Be able to create additional timer and astro-timer functions. Sunset and sunrise timer-based functions supports an offset.
- Possible to set the commissioning behavior for Learning Mode or Barcode Scan

Enhancements

- Enhanced Timer Overview
- Enhanced User Interface with icons for sensors, sensor channels, reception quality and battery status, etc.
- Improved re-connection behavior if the App is pulled from Background

xComfort Bridge 1.5.3

Features and Enhancements

New Features

- Astrotimer support: Sunset and Sunrise to control a room or a scene. Time and location are automatically set by your smart device.
- Dimming actuator settings: It is now possible to select a predefined DIM profile and set the lower dimming limit.
- The Demo Bridge is now accessible without an active WiFi connection.

Enhancements

- Several minor improvements

xComfort Bridge 1.0

Features and Enhancements

New Features

- Easy DIY commissioning via barcode scan (Smartphone camera) or mode button (Actuator)
- No programming knowledge or MRF needed
- Easy to set up specific lighting scenes
- Simple configurable user-defined zones (e.g. “kitchen”, “living room”)
- Central ON/OFF switch standard available on Home and Zone level
- Simultaneous switching for Scenes and Central ON/OFF switching
- RF network password protected automatically
- Always up-to-date with new features made available by means of App updates